Hitachi Ex2600-6 Hydraulic Excavator Workshop Service Repair Manual

This HITACHI EX2600-6 HYDRAULIC EXCAVATOR Service Manual has easy to read text sections with top quality diagrams and instructions. They are specifically written for the do it work as well as the



experienced mechanic.

ENGINE • 140 A alternator •

Heavy-duty type air cleaner with dust ejector



• Cartridge-type engine oil filter • Cartridge-type engine oil bypass filter • Cartridge-type fuel filter • Water filter • Radiator reserve tank • Fan guard • Isolation-mounted engine • Pre-lubrication system • Auto-idle system • Emergency engine stop system HYDRAULIC SYSTEM • E-P control system • OHS (Optimum Hydraulic System) • FPS (Fuel-saving Pump System) • Hydraulic drive cooling-fan system • Forced-lubrication and forced cooling pump drive system • Control valve with main relief valve • Suction filter • Full-flow filter • Bypass filter • Pilot filter • Drain filter • High-pressure strainer CAB • OPG top guard level II (ISO) • Fluid-filled elastic mounts • Laminated glass windshield • Reinforced/tinted (bronze color) glass side and rear windows • Parallel-link-type intermittent windshield wiper • Windshield washer • Adjustable reclining seat with air suspension • Footrest • Air horn with electric compressor • Auto-tuning AM-FM radio with digital clock • Seat belt • Hot & cool-box • Storage spaces • Floor mat • Air conditioner with defroster • Rearview mirror • Evacuation hammer • Emergency escape device • Trainer's seat • Pilot control shut-off lever

Hitachi Ex2600-6 Hydraulic Excavator Workshop Service Repair Manual