

Volvo Ec-25 Compact Excavator Workshop Service Repair Manual

These capacities are given for a machine without a bucket or quick attachment and equipped with rubber tracks for a full load lifted 360 °. The capacity of freight represents 75% of tipping load or 87% of the hydraulic limit.

Caution: In accordance with EN 475-5, for maintenance operations, the machine

It must be equipped with a safety valve on the boom cylinder and an indicator

overload (available in option).



[DOWNLOAD MANUAL HERE](#)