

Fig 85.

T011910-1-C1

[DOWNLOAD THE MANUAL](#)  
[HERE](#)



## **Operators Seat Base**

### **Removal and Replacement**

For this procedure, refer to ***Section 3 - Routine Maintenance***.

**[DOWNLOAD THE MANUAL HERE](#)**



Page left intent

**[DOWNLOAD THE MANUAL HERE](#)**

ionally blank

# Engine Cover

## Removal and Replacement

### Removal

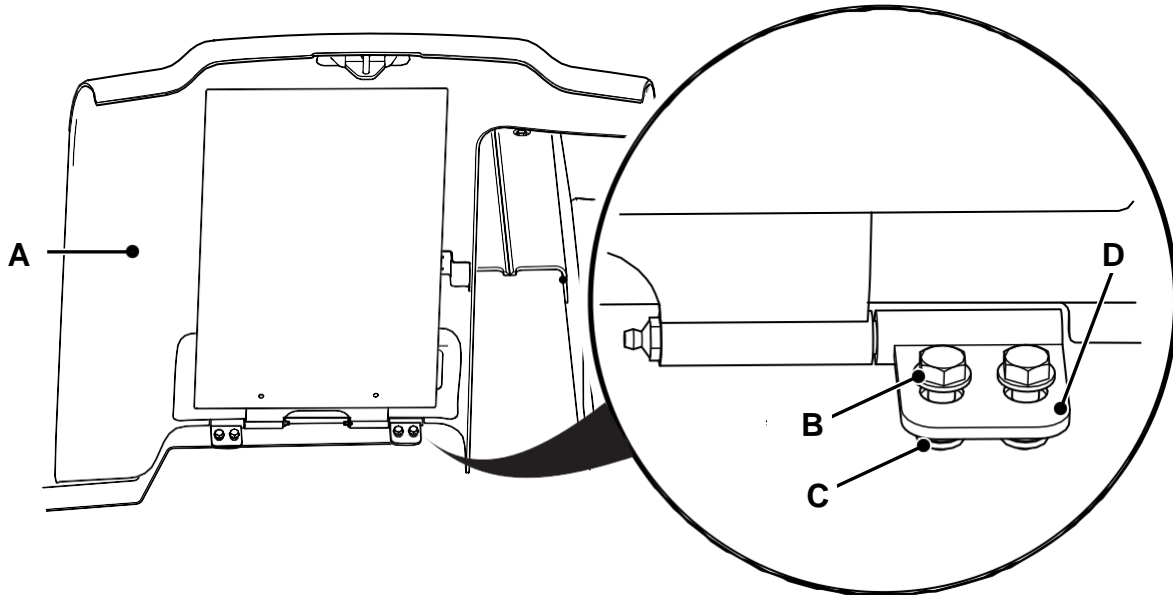


Fig 86.

C090270

### ! WARNING

The engine has exposed rotating parts. Switch OFF the engine before working in the engine compartment. Do not use the machine with the engine cover open.

5-2-6-5

### ! CAUTION

Hot oil and engine components can burn you. Make sure the engine is cool before doing this job.

2-3-3-2

- 1 Make the machine safe with the boom lowered. Stop the engine. Refer to **Section 3 - Routine Maintenance**.
- 2 Open the engine cover. Refer to **Section 3 - Routine Maintenance**.

[\*\*DOWNLOAD THE MANUAL HERE\*\*](#)

4

- 3 Support the engine cover A.  
Remove bolts B and nuts C from the hinges D at both sides of the engine cover A.
- 5 Remove the engine cover from the machine.

### Replacement

Replacement is the opposite of the removal procedure.



Page left intentionally blank

**[DOWNLOAD THE MANUAL HERE](#)**